



Caring for your Banner Stand

Here are some simple tips to help prolong the working life of your banner stand...

- When packing away your roller banner stand

NEVER UN-HOOK THE GRAPHIC FROM THE TOP AND LET IT DROP!

This can easily damage the powerful spring mechanism in the base and damage your graphic at the same time. Such damage is not covered by warranty!

Carefully lower the graphic manually into its base.

- Never fold or bend your graphics as this may produce permanent creasing damage. You should always loosely roll your graphics.
- Use a proper transit case to transport and store your stand. If you have not used your banner stand for a while try and carry out a trial assembly before your event to make sure everything is in order.
- Do not expose your graphics to moisture or overly intense direct sunlight.
- Do not expose your graphics to higher than normal levels of heat. Store in a dry, temperate environment.
- You should never need to use excessive force to assemble or dismantle one of our banner stands. If you feel resistance then please check that there are no obstructions. NEVER use excessive force!
- The nylon carry bag is not designed to withstand the rigours of transport by commercial couriers. Please make sure your stand is adequately packed in a cardboard box to avoid associated damage.

•Ensure that all users are aware of these basic rules!