



When you remove the frame from its bag place it on the floor so that the blue pins (which are the top front of the frame) are at the top with their arrows pointing away from you.


TOP FRONT OF FRAME

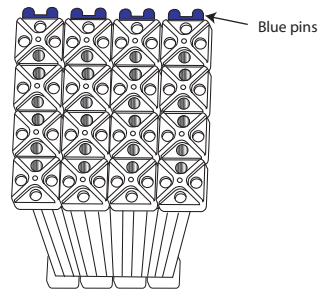

Holding the back of the two outside nodes gently pull the frame open.

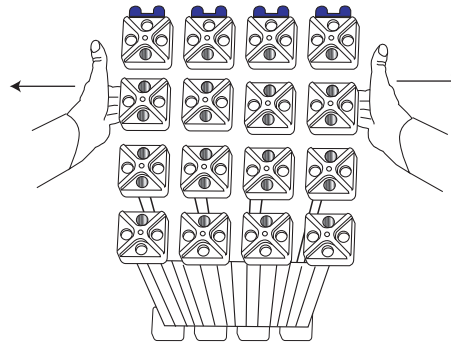


When the frame is wide enough reach in behind the two centre nodes one down from the top and grasp the white metal scissors.

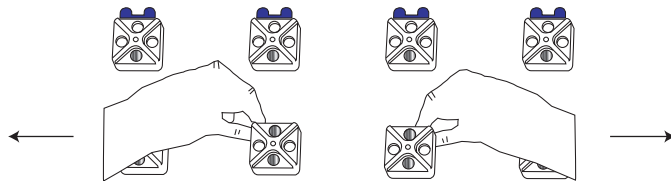

Lean the frame towards you and continue widening it.




As the frame continues to expand start to tilt it upright.

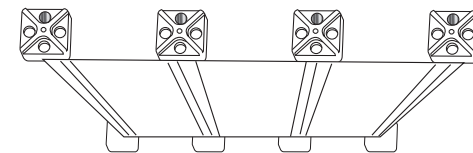

Continue expanding the frame until the two magnetic latches engage.


The frame is now fully erect.

It is now safe to let go.

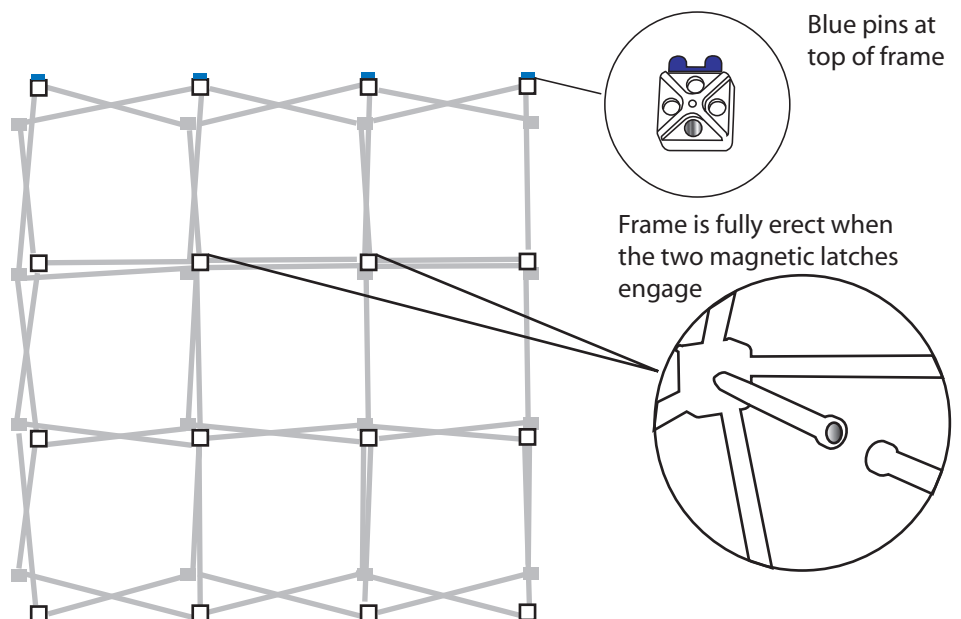


Now that the frame is up. Take the magnetic bars from their bag and fix them vertically to the frame as shown.

Note: *example shows a 3x3 frame with 18 magnetic bars.*

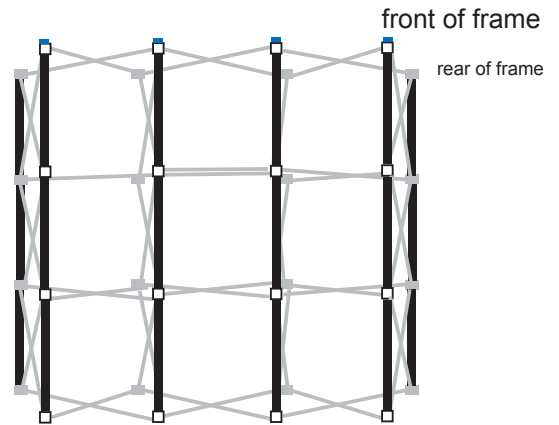


Find the two blue locating lugs fixed to the black plastic stiffening strip at the top rear of each graphic or fabric panel.

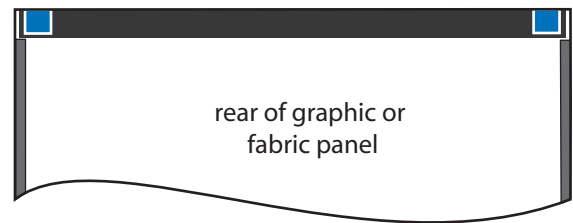

These locating lugs go over the blue pins at the top of the frame. The edge of each panel lays down the centre of three vertical magnetic bars.


Note: *the magnetic bar is polarised and has THREE places where the graphic will locate. Make sure it is down the centre of the bar!*

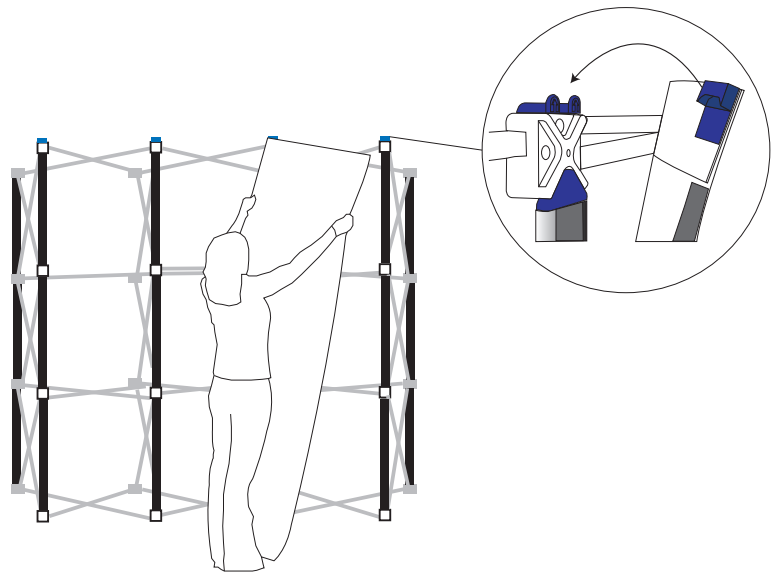




End panels simply hook on to the assembled pop up.

Lamps fit at the top of the Pop Up to the left of the riveted axle of the white scissor assemblies.


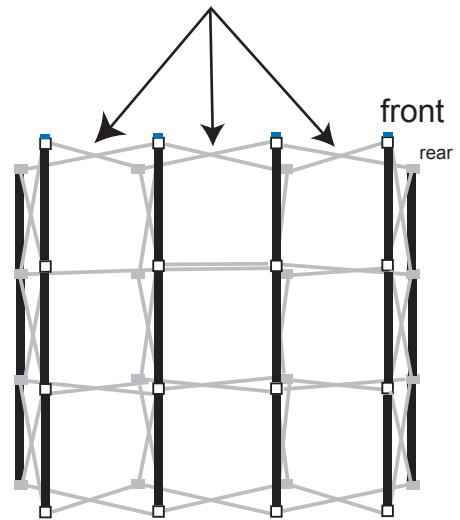


Tilt lamp assembly to allow body of light to go over the top tube of scissor assembly to the left of the axle rivet.

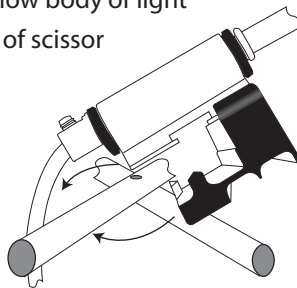

Plastic mounting bracket goes under the top tube of scissor assembly and over the bottom tube.

Resting position of lamp bracket.

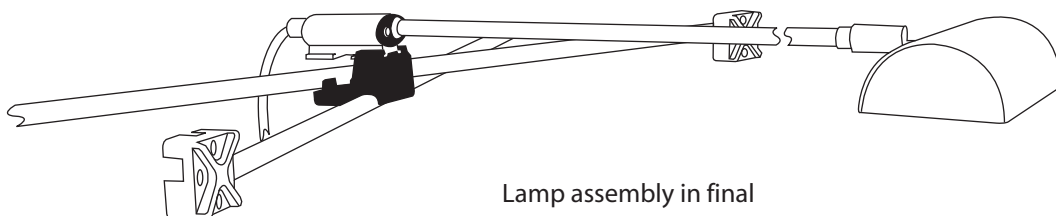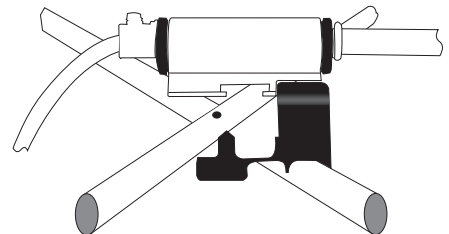

Lamp assembly in final position